

Gas Operation

The Inert gas operates with the Televac MM200 Vacuum gauge relay set point #6. When the inert gas is first turned on either manually from the control graphic or automatically by using event 3 in the Honeywell profile program and the chamber is below the on set point (#6 is illuminated see photo below) the inert gas will turn on, as the gas fills the chamber and the pressure rises above the off point the gas will turn off. (#6 will go off)

The set point settings can be viewed or changed by pressing setup repeatedly until the set point for on and off are displayed. Change the setting by pressing the up arrow or down arrow.

